



W52
Montážny návod
Stolík Kombi 2


Rev. 01.04.2026

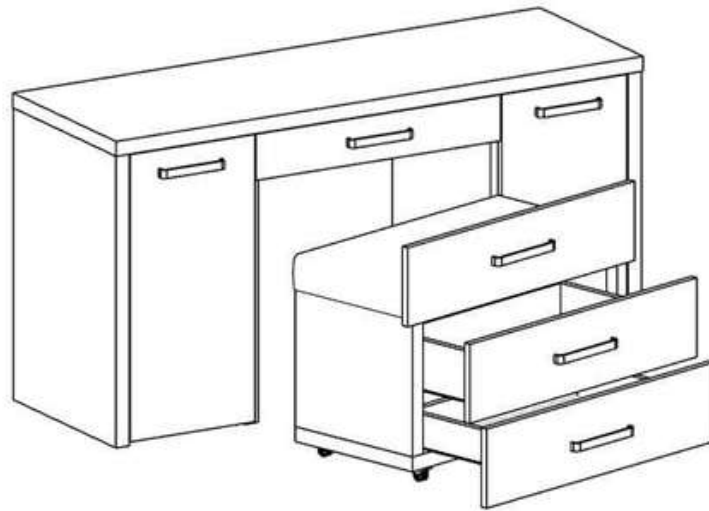


1

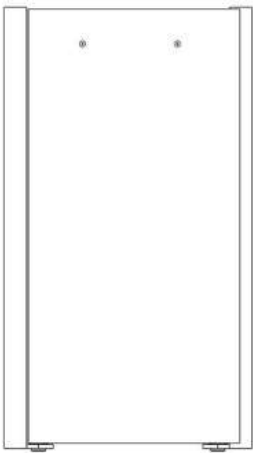


2

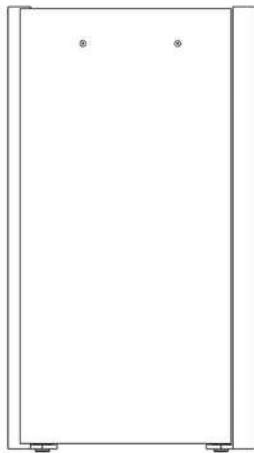

3

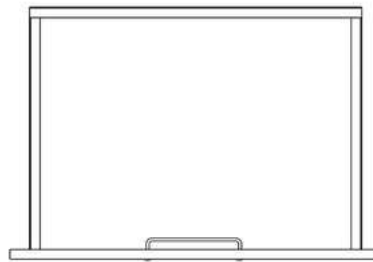


4

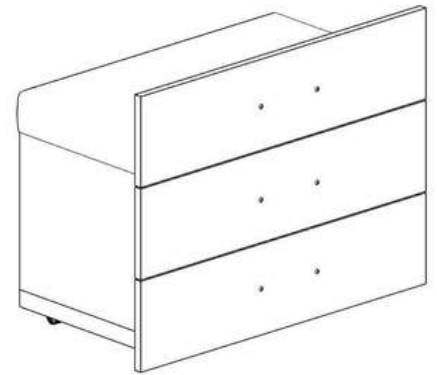

5




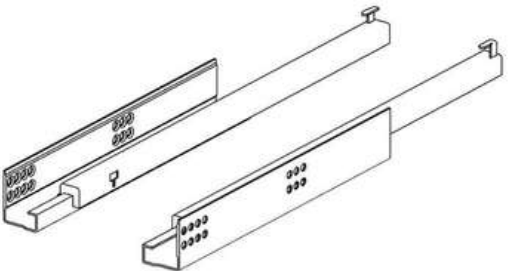
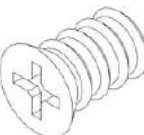


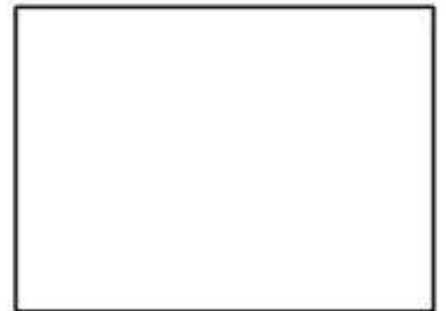



6





7





<p>1</p>  <p>36x</p>	<p>2</p> <p>15/19</p>  <p>4x</p>	<p>3</p>  <p>14x</p>	<p>4</p>  <p>1x</p>
<p>5</p>  <p>6,3x13</p> <p>6x</p>	<p>6</p>  <p>25ks</p>	   <p>6</p>	



1

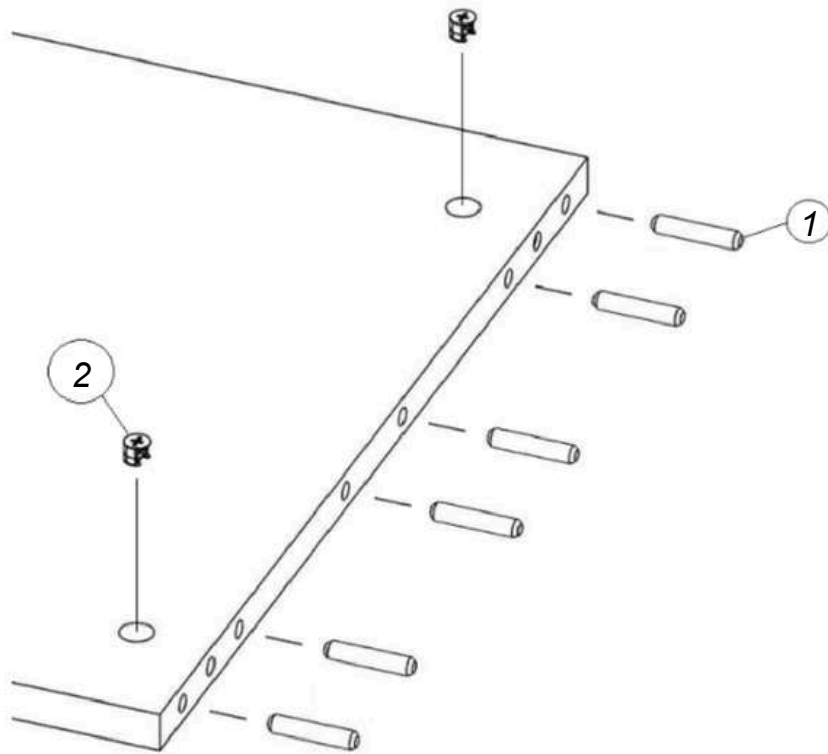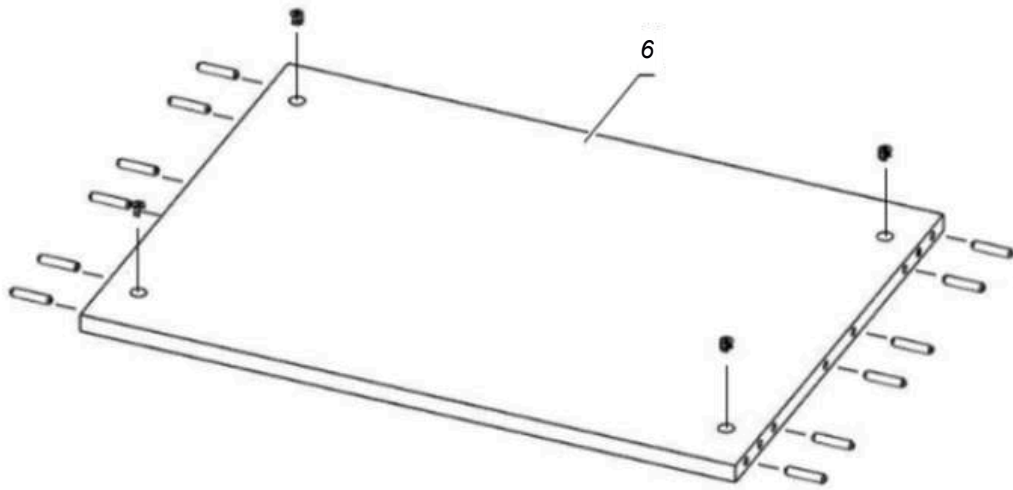



2

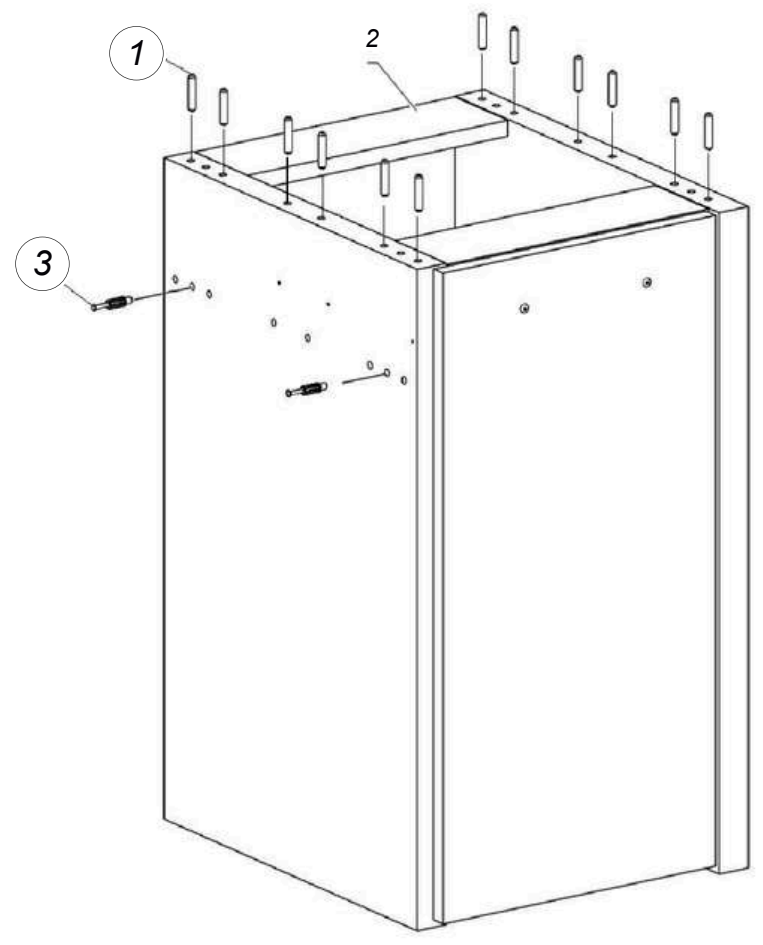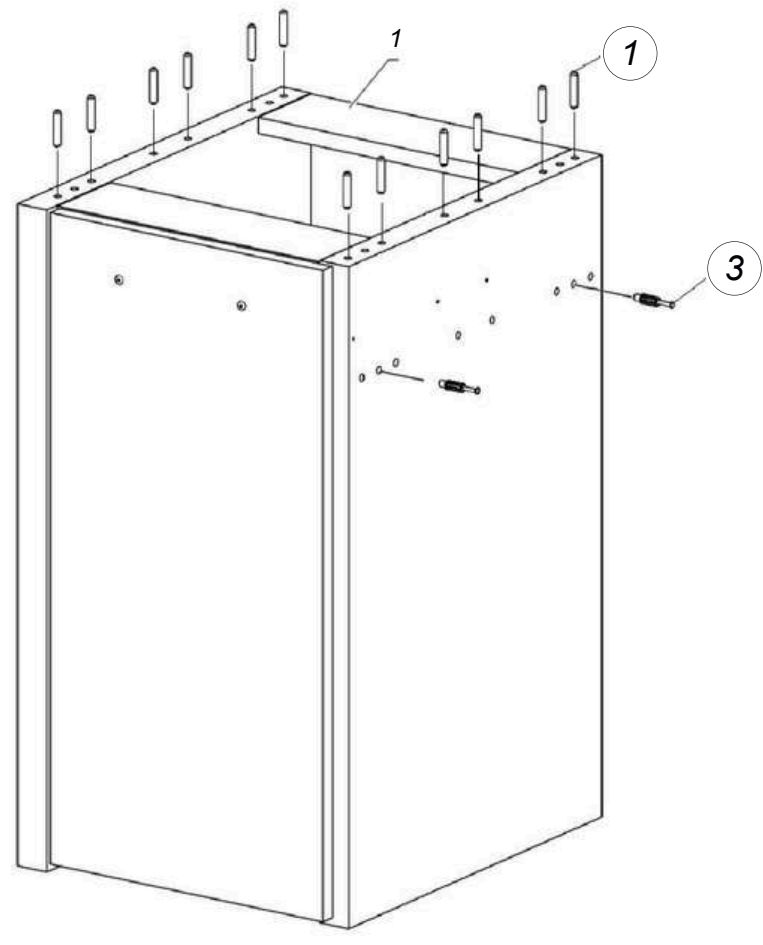




3

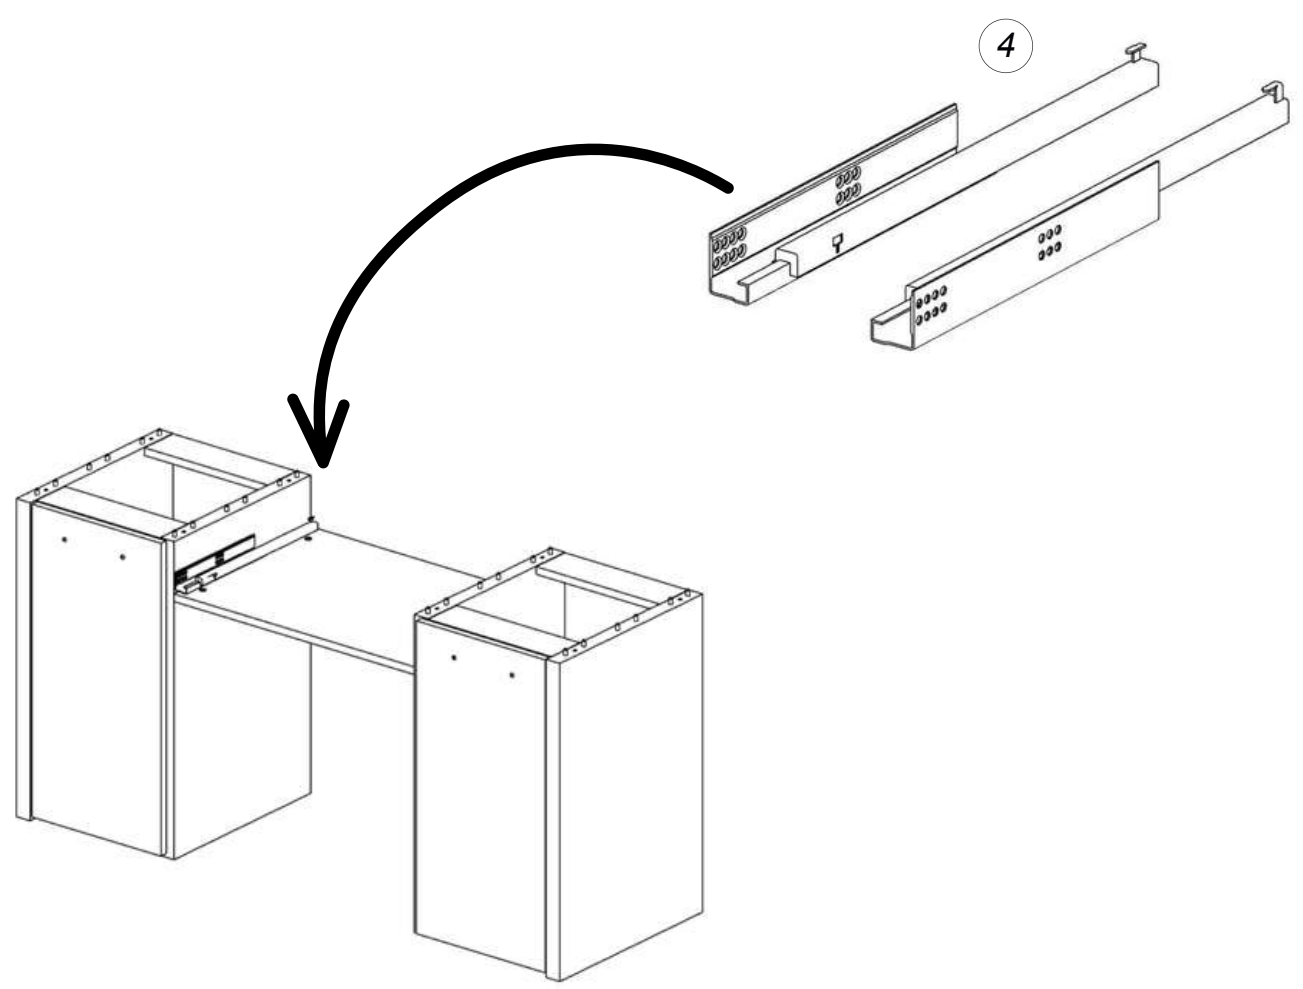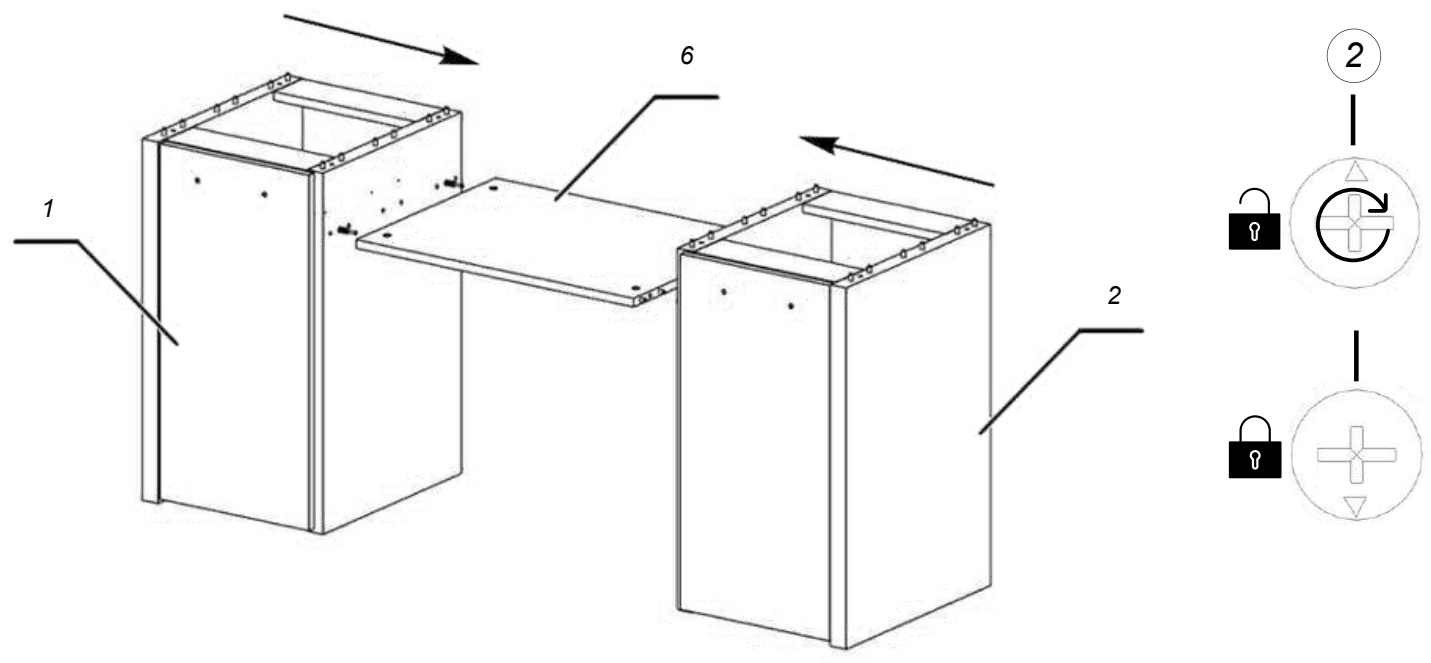

4

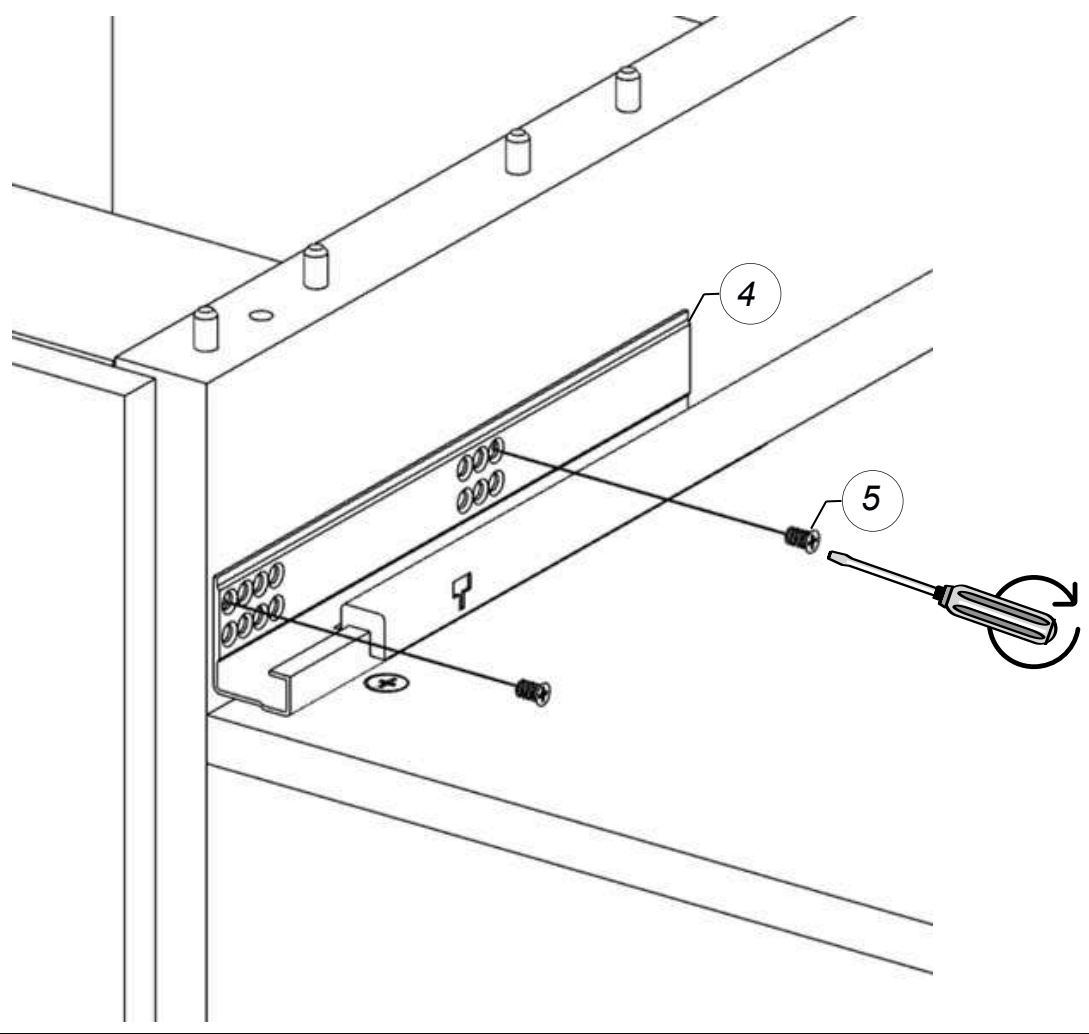
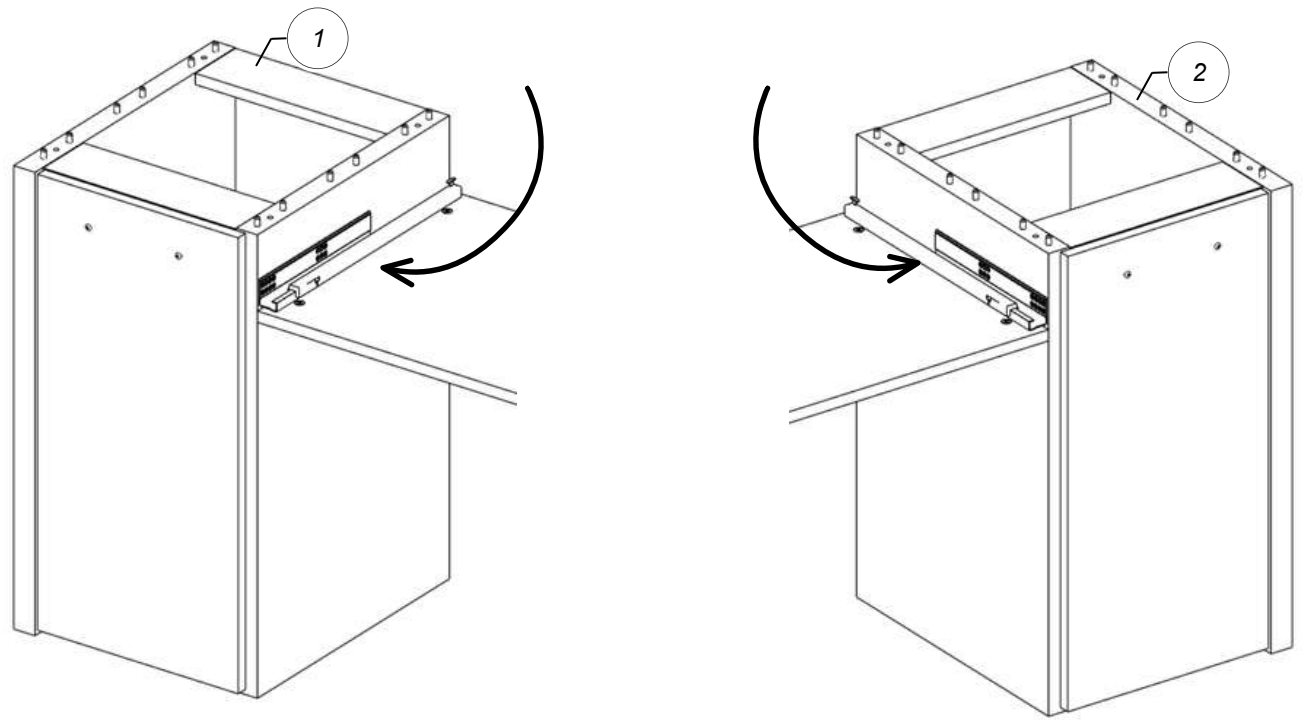


5

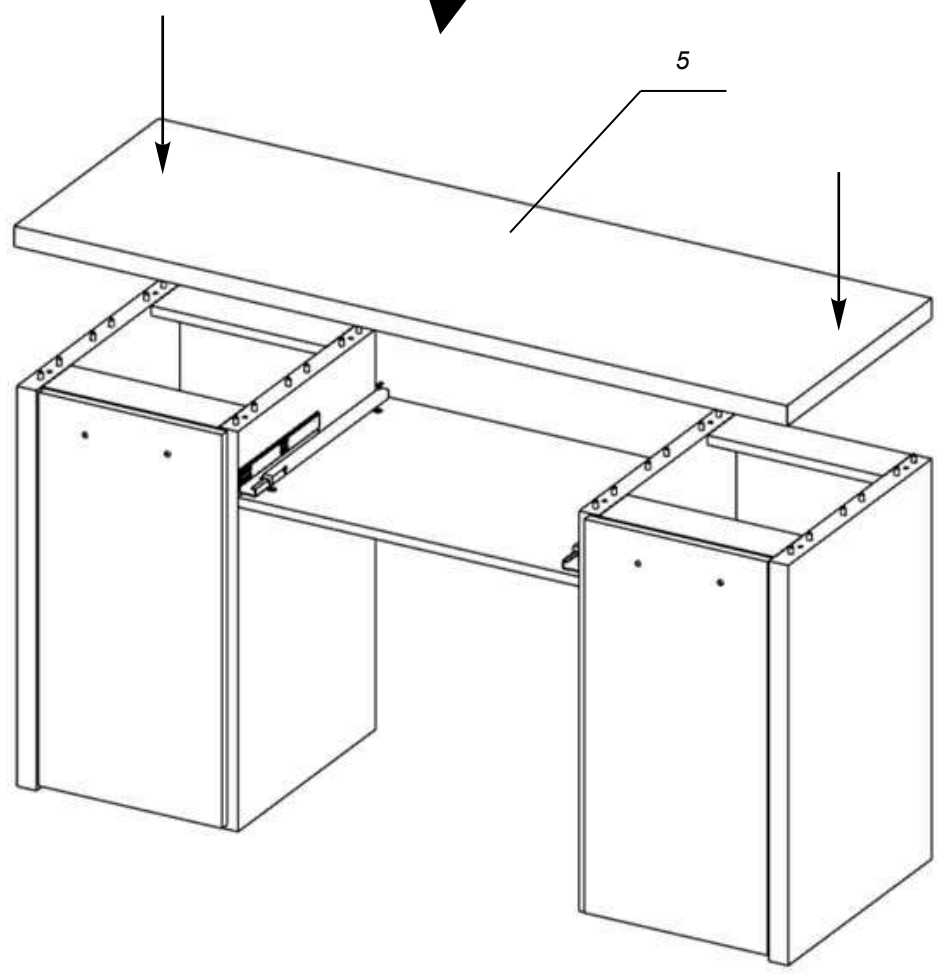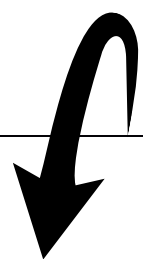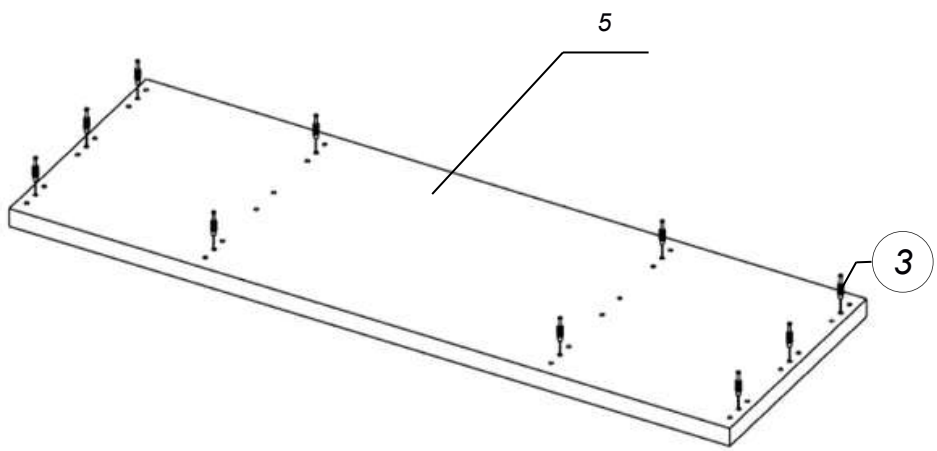


6

L+P

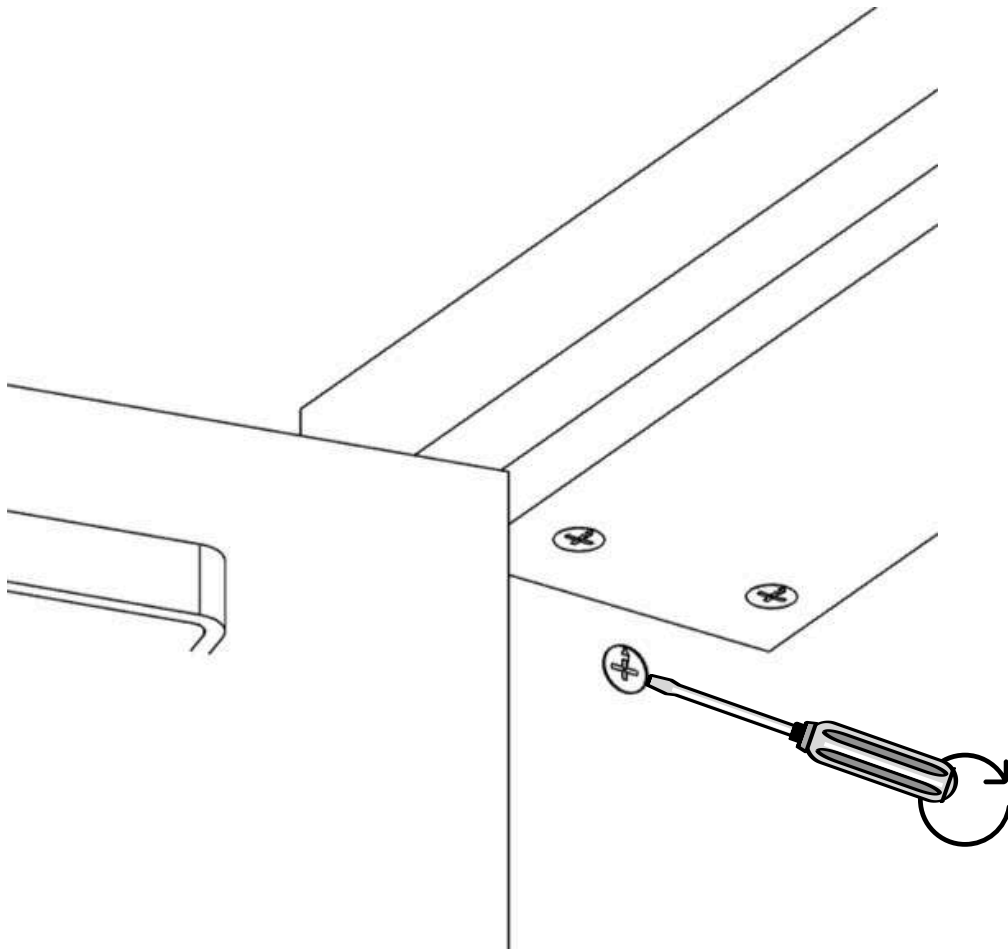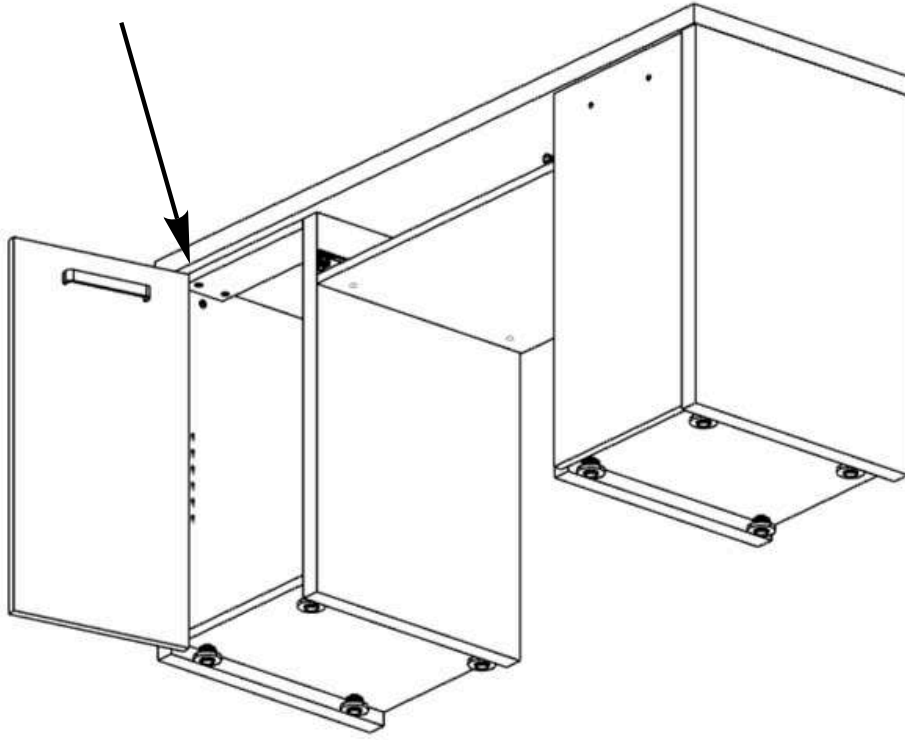


10x

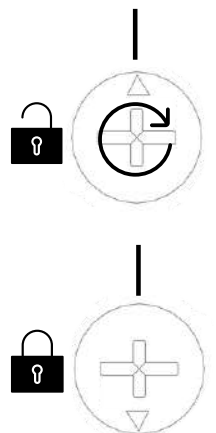





7

6x


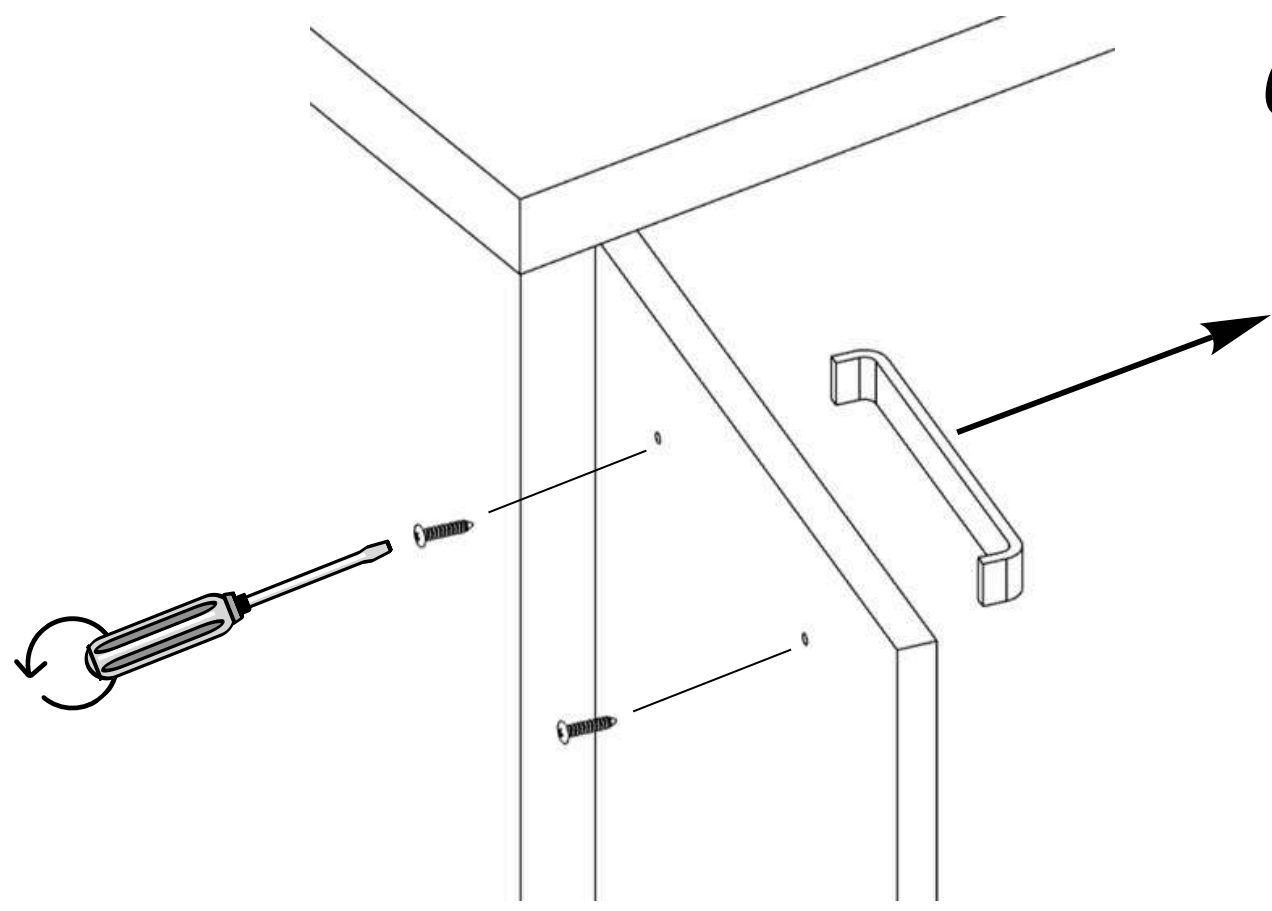



6x

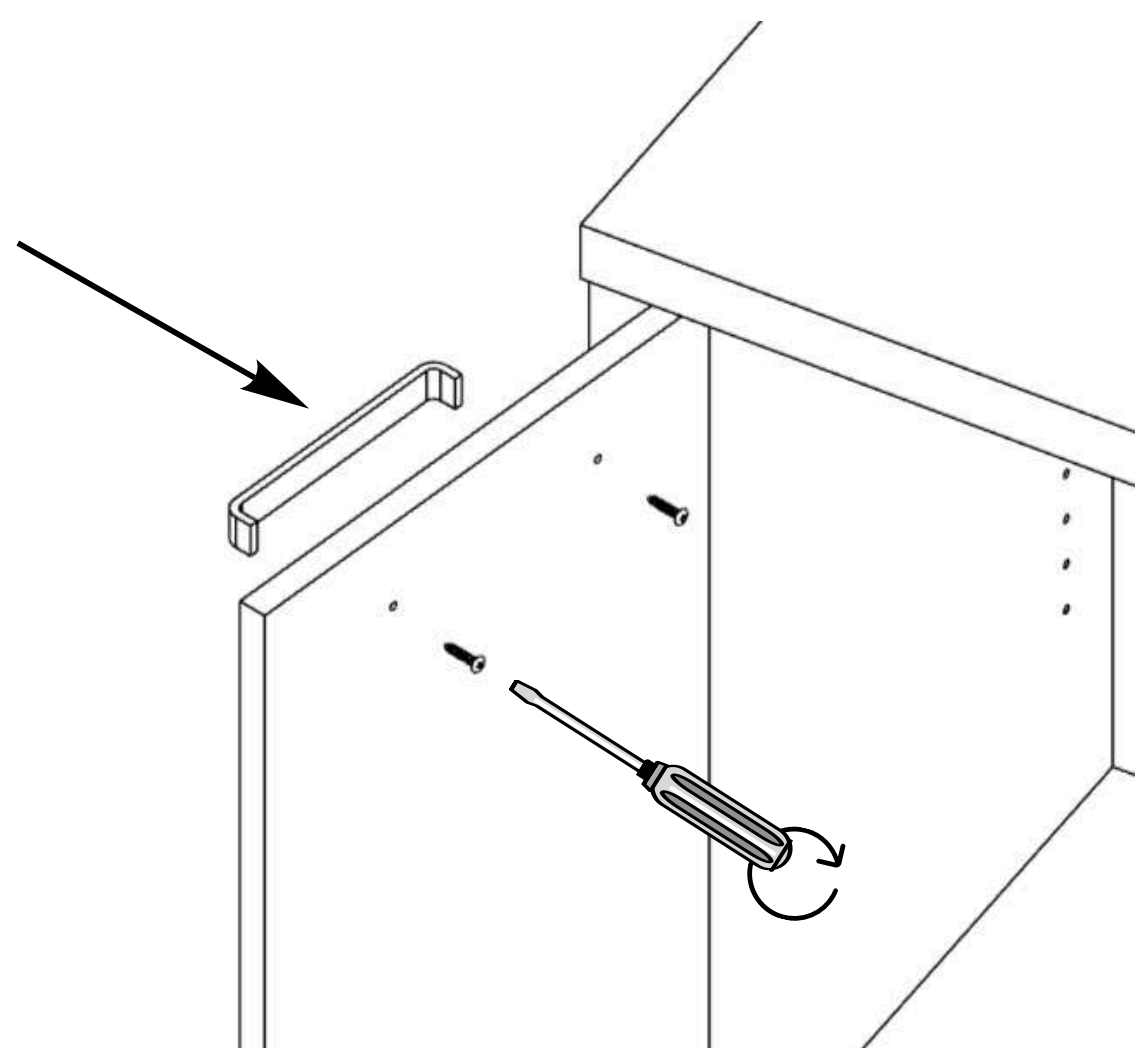

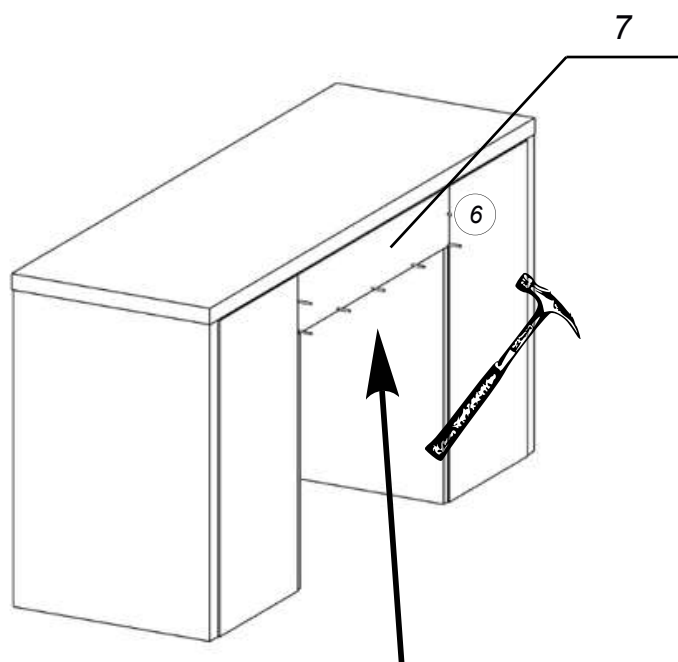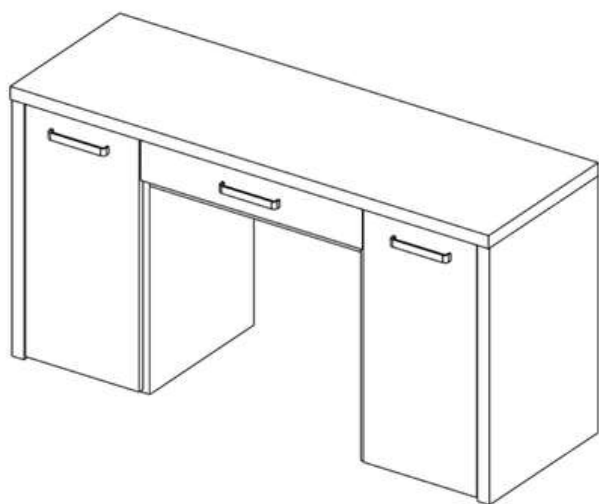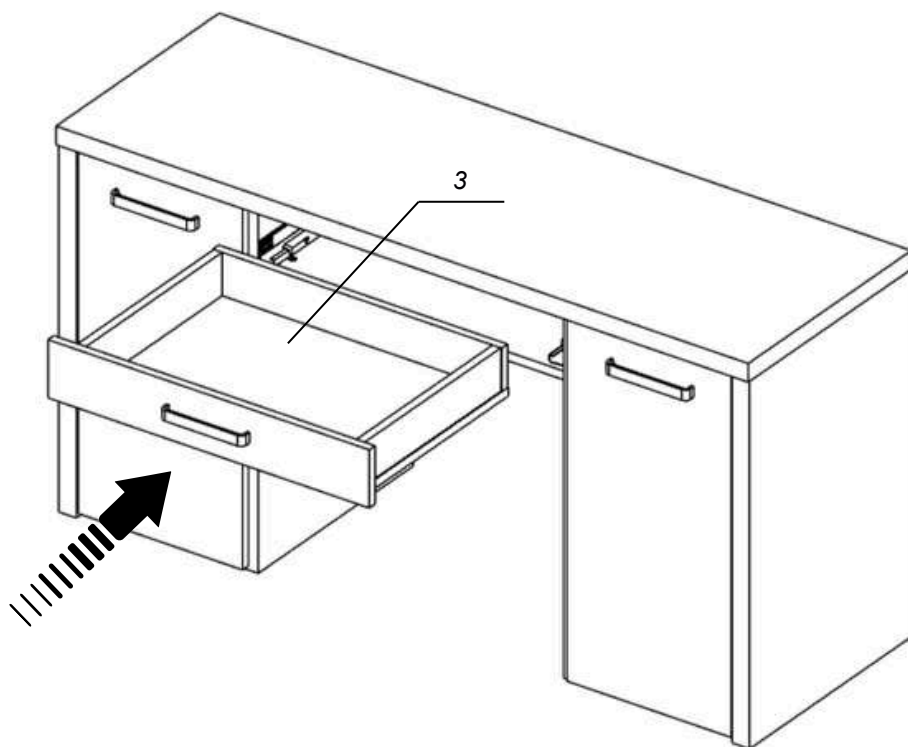


9

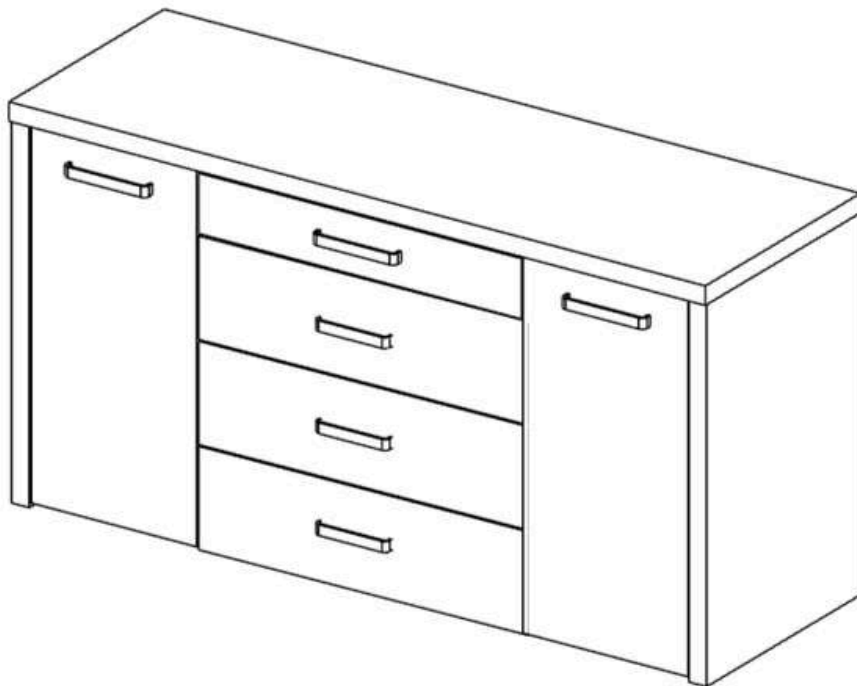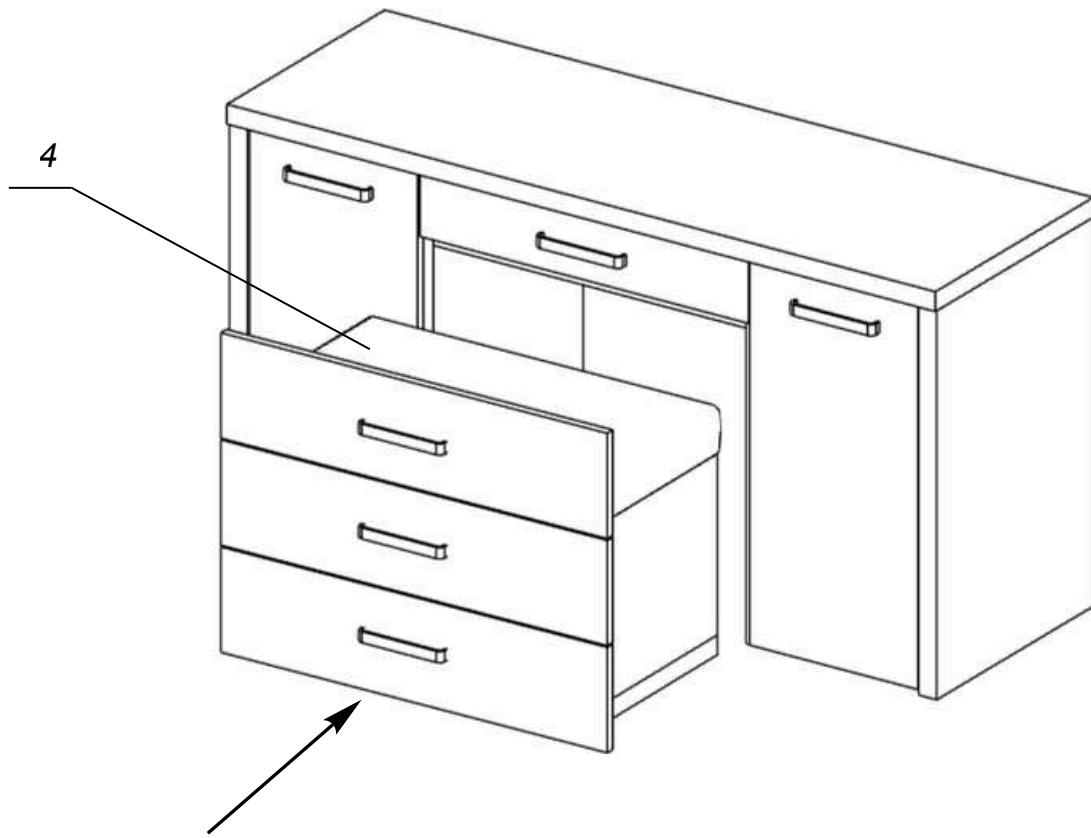

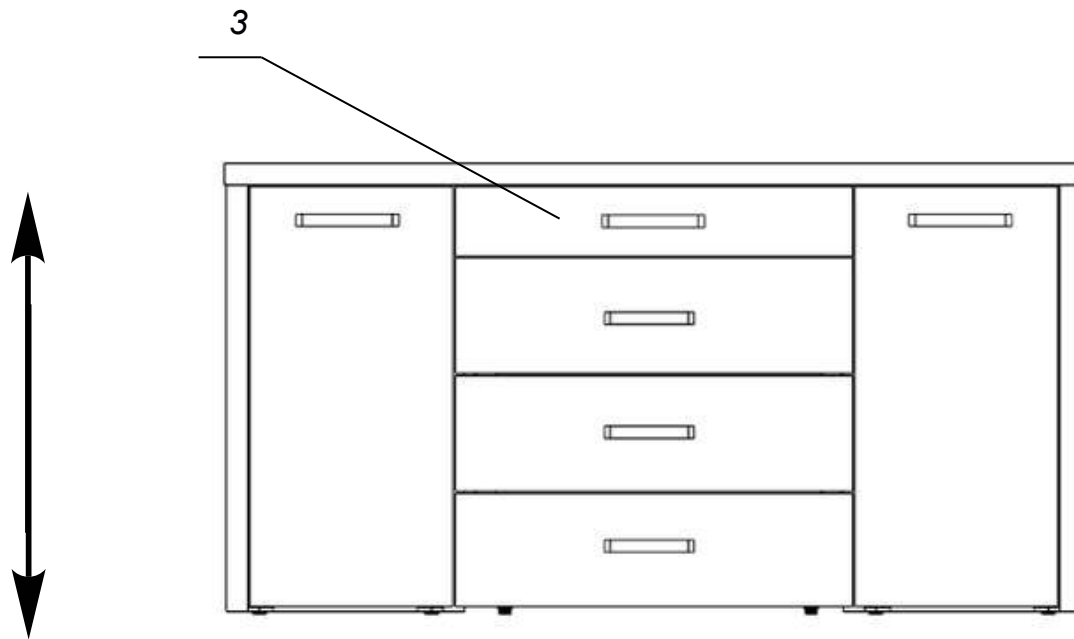


PUSH - OUT

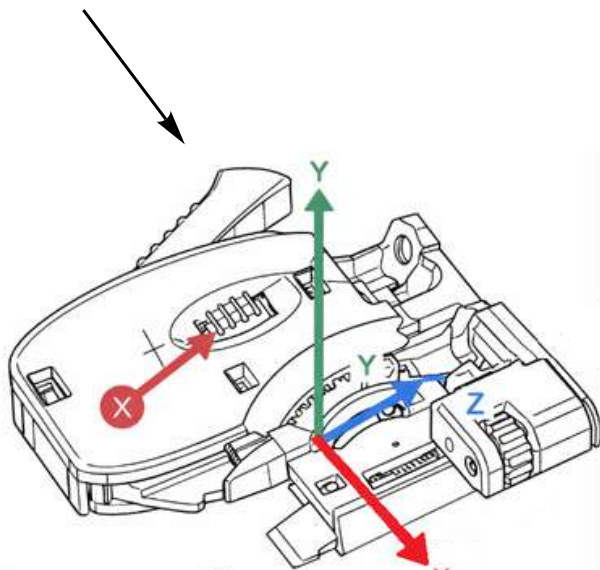

- X - posun vpravo/vľavo
- Y - posun hore/dolu
- Z - posun vpred/vzad (pri vložení čielky napr. komoda)

3

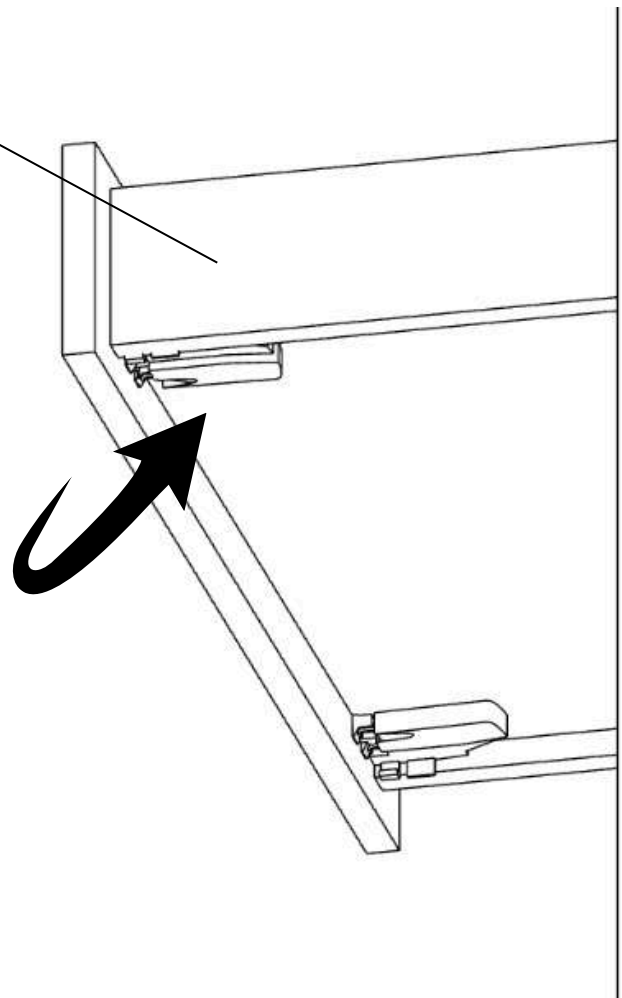

11

